



---

# Transrotor Fat Bob S/Fat Bob Plus and Fat Bob Reference



## Manual

---

Our turntables are precise mechanical masterpieces, expressing a consequent handicraft.

It is our goal to manufacture a turntable for our customers which sounds excellent, is comfortable and logically to handle, is made only of best material, functions for decades and later offers an easy service.

---

## **Delivery Extent (standard)**


Before building-up the turntable please check if all parts are enclosed.

- Turntable-chassis incl. mounted tonearm base and mainbearing
- Motor
- Power-Supply-Unit
- Mainbearing oil
- 3 Spike-mats
- Belt
- Platter
- Platter-weight
- One pair of cotton gloves
- Bag containing tonearm accessories (cartridge accessories & manual)

## Construction

Please start to build-up the turntable at its final place because of difficult transport after construction. To avoid fingerprints on perspex and polished parts, please put on the enclosed cotton gloves.

1. Lay the spike-mats in a triangle shape on the table (two at the front and on midst at the backside).
2. Put the turntable-chassis with the spikes into the deepening of the spike-mats.
3. The height can be changed by turning the spike-feet, so the chassis can be brought in a horizontal position.
4. Pull-off the upper part of the mainbearing and fill-in the whole injection containing mainbearing-oil into the oil-reservoir (see attachment). Set the upper part of the mainbearing carefully back on top again.
5. Place the motor as mentioned in the drawing below. The construction of this turntable allows any placement around the platter. Only note that the distance to the platter must be redeemed (approx. 1 cm from the margin of the motor to the margin of the platter).

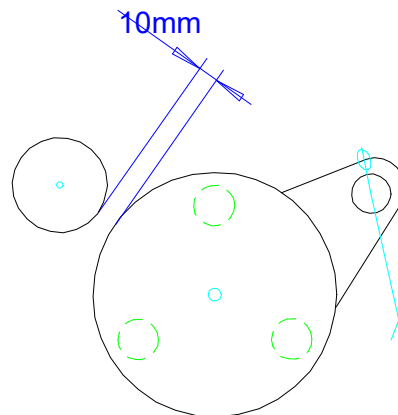

6. Now fix the belt around the inner-platter and the motor-pully. The inner-platter has got three grooves, however, the motor-pully has got four:

upper groove (small diameter) =  $33 \frac{1}{3}$  U/min  
lower groove (big diameter) = 45 U/min

7. Now take the platter from the packaging and set it on to the mainbearing.
8. Put the plug of the motor-cable into the power-supply-unit. Connect the power-supply-unit with the circuit. Basically, the power-supply-unit can remain plugged-in, as the power consumption with switched-off motor is quite insignificant. Disconnect the power-supply-unit only in case of longer no-usage.
9. Connect the NF-cable with both cinch-plugs at the phono-entrance of your amplifier:

**red = right channel**  
**white or black = left channel**

10. Please take the information regarding the tonearm adjustment from the special tonearm instruction-manual.
11. Please take information and figures regarding the installation of the cartridge from the special cartridge-manual.



## **Usage**

Always switch-off the motor before laying a record on the platter.

### **Listening of records**

1. Lay a record on the platter.
2. If a platter-weight is available, set it on the platter-spindle, so even slight wavy records can be played with accuracy and a high quality standard.
3. Move the tonearm over the first groove of the record and then lower it with the tonearm-lift.



---

## Specialities:

- The mainbearing-oil has to be checked once a year. It has to be exchanged in case of discolouration or if dirt particles are discovered.
  - The Fat Bob S can be equipped with a second tonearmbase (left). The motor then has to be placed midst on the backside of the turntable
- 

## Care-indication

Your transrotor turntable is manufactured only of very best material. All parts are sturdy, easy-care and made for a longlasting use. Please pay attention to the following indications to keep your turntable in a brilliant state.

### Dust-cover, chassis and platter

Always use a moisty leather for normal cleaning. Never use a dry leather, as scratches on the surface increase. You achieve the best result by using the cleaning-lotion **Laser Clean** and the flossfree soft **Laser Cloth**. In addition the cleaned parts are mostly free of statical loading. Oil or grease stains can be removed easily by using benzine (pharmacy).

### Aluminium and metal parts

Also here, oil and grease stains can be removed with benzine. Slight scratches can be removed with a special aluminium-polish. Please do not use any other polish or cleaning agent.

### Belt

Rub the belt every once in a while in talcum. Remove loose talcum with a dry cloth before fixing the belt at the platter.

The careset contains:

- Aluminium-polish
- Laser Clean
- Laser Cloth
- One pair of cotton gloves

This careset can be ordered through your dealer or at our service-line.

---

---

---

## **Additional Data**

### **Fat Bob S**

#### **Dimensions:** (W x D x H)

44 cm x 38 cm x 18 cm (another placing of the motor leads to different dimensions)

#### **Weigh:**

approx. 25 Kg

---

**In case you have further questions regarding your turntable, accessory or service parts please ask your dealer or contact us via telephone.**

#### **Service Telefon:**

**Monday – Thursday from 15.00 to 16.00 pm, Tel: ##49-2202-31046**

---

**This turntable is expressly subject to any technical alterations, errors and omissions!**